



iPhone 4 Verizon Front Facing Camera Replacement

Replace a broken front facing camera on your iPhone 4 Verizon.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace a broken front facing camera.



TOOLS:


- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [2.5 mm Flathead Screwdriver](#) (1)






PARTS:

- [iPhone 4 \(CDMA Verizon\) Front Facing Camera](#) (1)

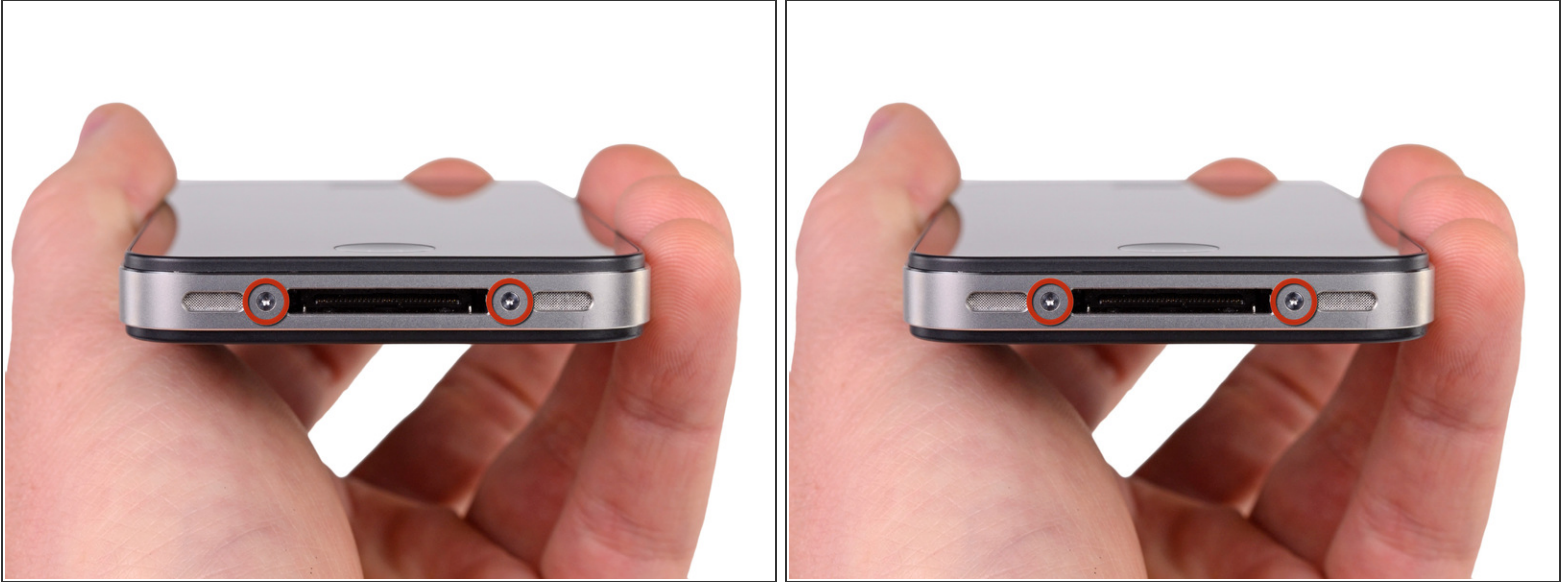Step 1 — Rear Panel



-  Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- Power off your iPhone before beginning disassembly.
- Your phone's rear cover may have two #000 Phillips screws **or** Apple's 5-Point "Pentalobe" screws. Check which screws you have, and ensure you also have the correct screwdriver in order to remove them.
- Remove the two 3.6 mm Pentalobe or Phillips #000 screws next to the dock connector.
-  During reassembly, we recommend you replace the 5-point screws with equivalent Phillips screws. Our [Liberation Kit](#) provides the tools and screws needed to replace the Pentalobe screws with Phillips screws.
-  The 5-Point Screwdriver should only be used once, as it has the potential to strip the screws.

Step 2



- Push the rear panel toward the top edge of the iPhone.

i The panel will move about 2 mm.


Step 3



- Pinch the rear panel with your fingers, and lift it away from the iPhone. Alternatively, use a [Small Suction Cup](#).

! Be careful not to damage the plastic clips attached to the rear panel.

Step 4 — Battery

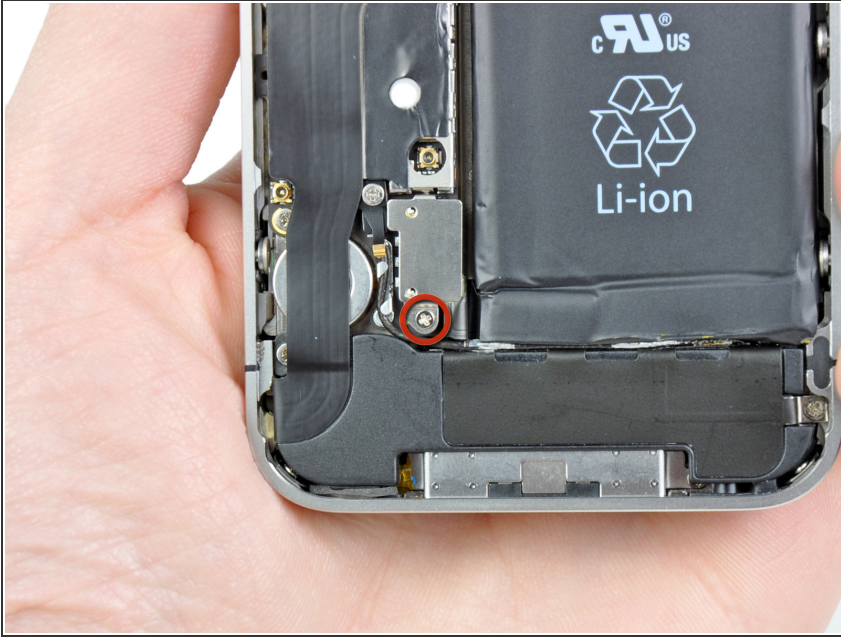


- Remove the single 1.5 mm Phillips screw securing the battery connector to the logic board (if present).

Step 5




- Use the edge of a plastic opening tool to gently pry the battery connector up from its socket on the logic board.
- ⚠ Be very careful to only pry up on the battery connector and not the socket on the logic board. If you pry up on the logic board socket, you may break it entirely.
- Remove the metal clip covering the antenna connector.

Step 6

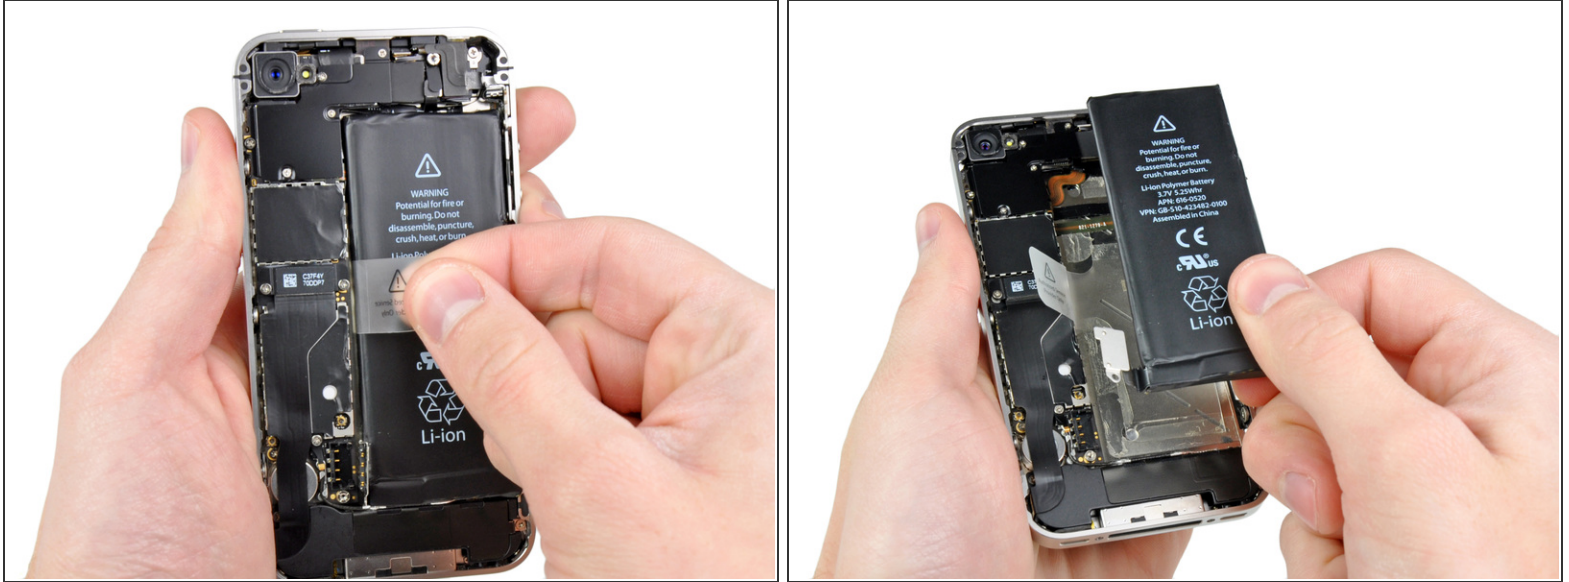


- Pull up on the exposed clear plastic tab to peel the battery off the adhesive securing it to the iPhone.

 If the tab breaks before the battery is freed, carefully slide a spudger under the battery tab to release the adhesive. Prying in other places may cause damage.


- Remove the battery.
- Before reassembly, clean metal-to-metal contact points with a de-greaser such as windex. The oils from your fingers have the potential to cause wireless interference issues.
- Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

Step 7 — Dock Connector Cable

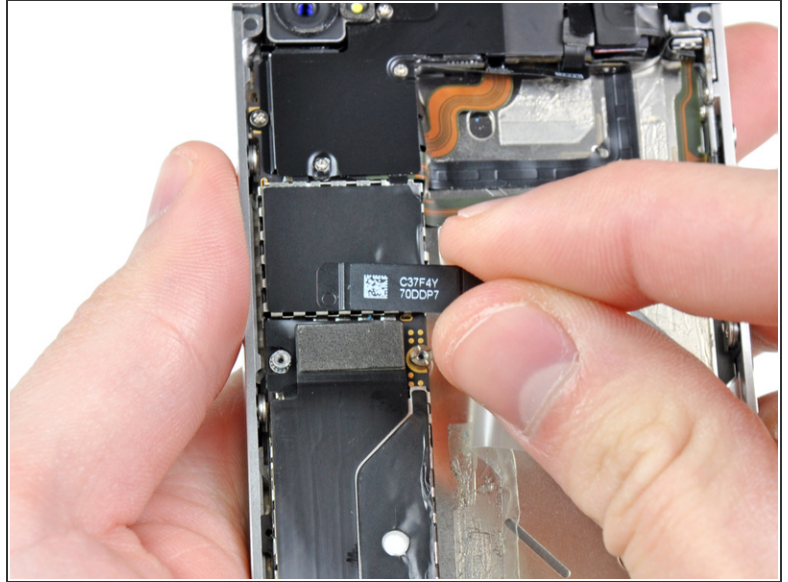


- Remove the two 1.8 mm Phillips screws securing the dock connector cable to the logic board.
- Remove the thin metal dock connector cable cover.

Step 8

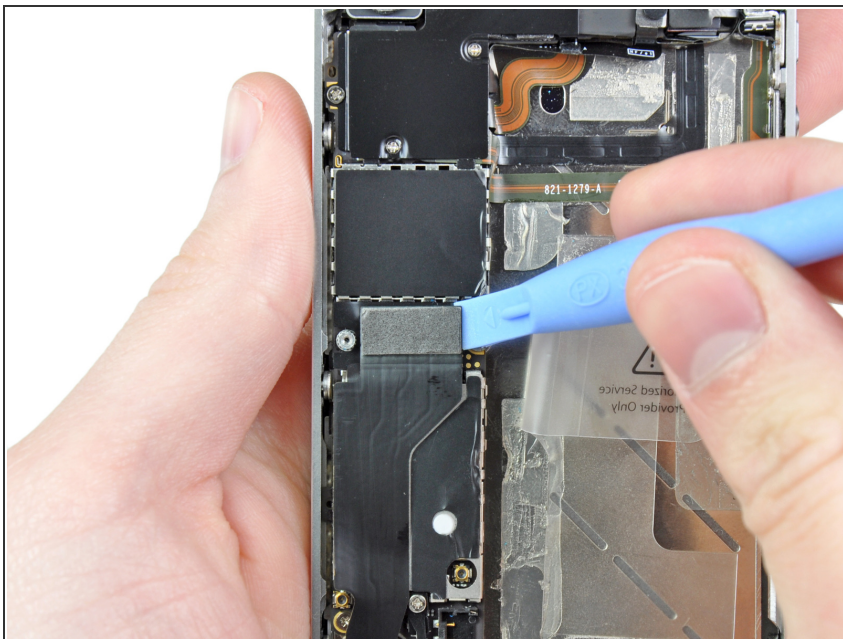



- Use the edge of a plastic opening tool to pry the dock cable up from its socket on the logic board.

Step 9

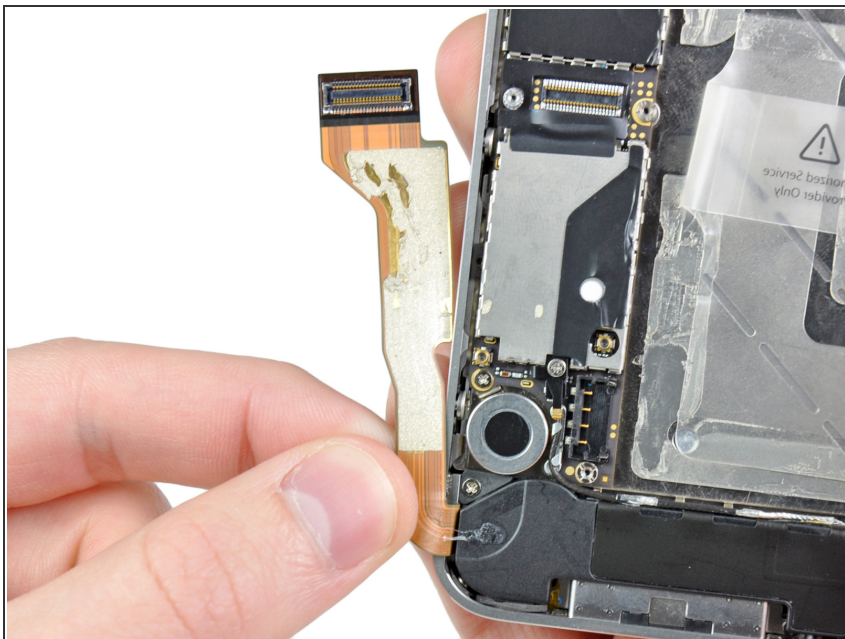

- Peel the dock connector cable off the adhesive securing it to the logic board and the side of the speaker enclosure.

Step 10

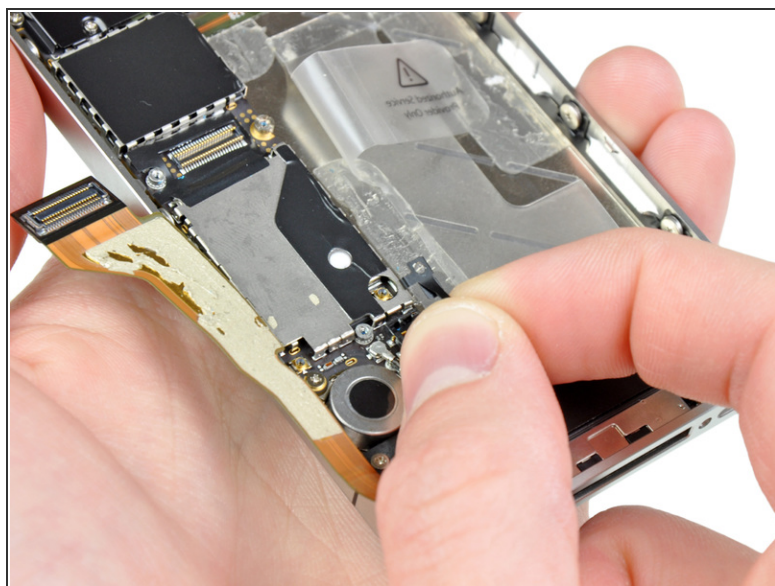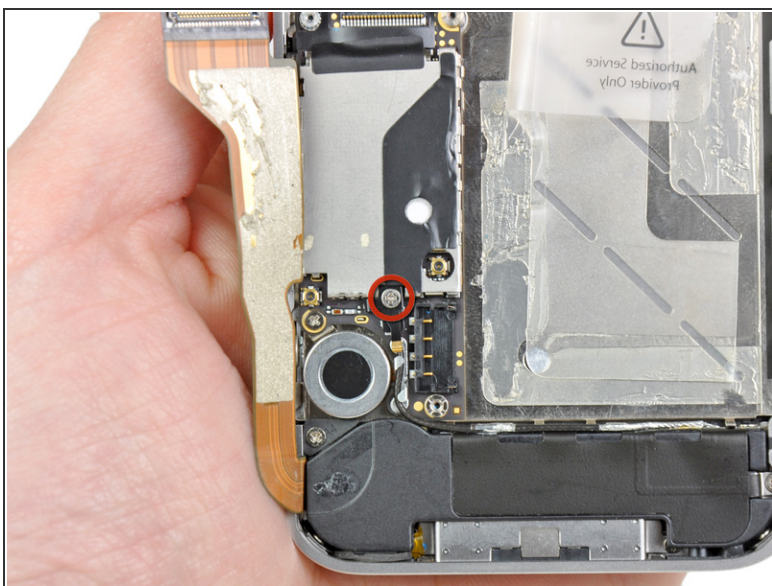

- Remove the 1.6 mm Phillips screw securing the pressure contact to the logic board near the vibrator.
- Remove the pressure contact.


Step 11



- Use the edge of a plastic opening tool to pry the cellular antenna cable up from its socket on the logic board.
- De-route the cellular antenna cable out from under the metal fingers attached to the logic board.



⚠ When reconnecting the antenna wire be VERY certain that the round connector at the end of the wire is centered on its mating half on the motherboard before applying pressure. Failure to do so will likely destroy both halves of the connector.

Step 12 — Rear Camera

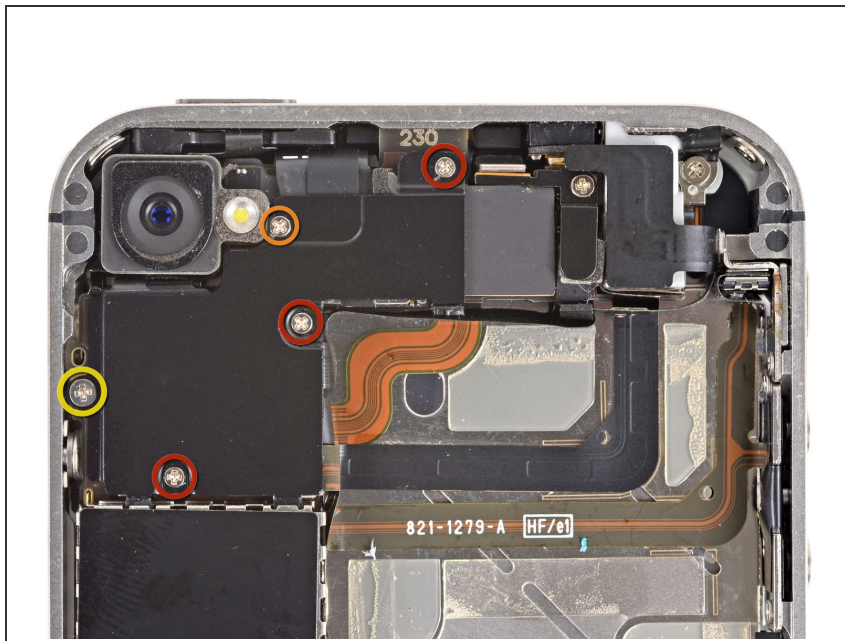

- Remove the following five screws:
 - Three 1.3 mm Phillips screws
 - One 1.5 mm Phillips screw
 - One 2.4 mm Phillips screw

Step 13

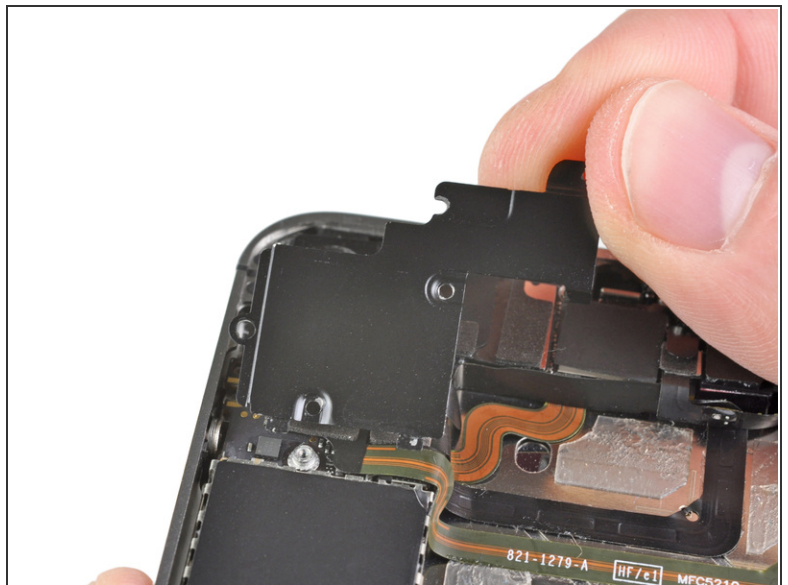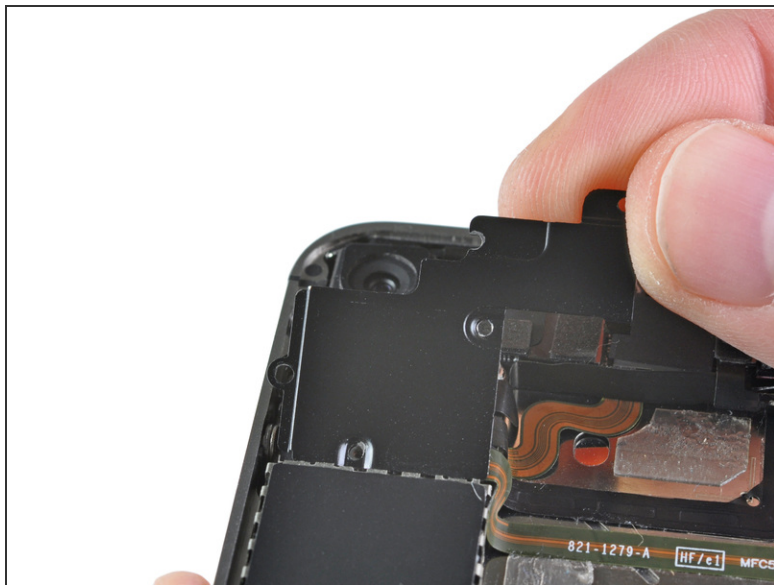

- Lift the cable cover from its edge nearest the top of the iPhone.
- Pull the cable cover tabs out of their slots cut into the EMI shield on the logic board and remove it from the iPhone.

Step 14




- Use the edge of a plastic opening tool to pry the rear camera connector up from its socket on the logic board.

⚠ Be careful not to break any components off the surrounding area on the logic board as you pry upwards.


- Remove the rear camera from the iPhone.

⚠ Be careful not to scratch the back of the display assembly after the removal of the rear facing camera.


Step 15 — Logic Board

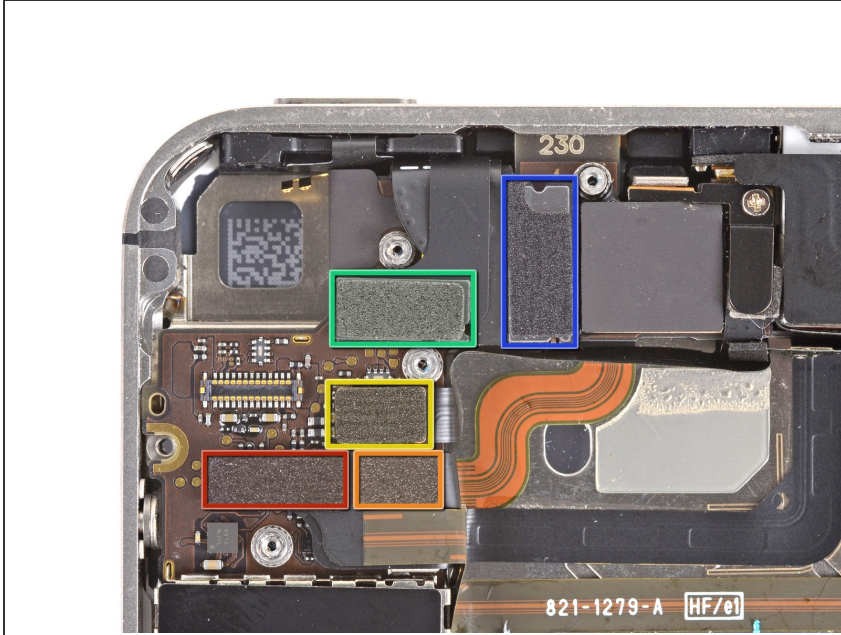

- Disconnect the five cables near the top of the logic board in the following order:
 - Headphone jack/volume button cable
 - Power button cable
 - Front facing camera cable
 - Digitizer cable
 - Display data cable
- To disconnect the cables, use the edge of a plastic opening tool to gently lift their connectors up and out of the sockets on the logic board.


 Be careful not to break any of the small and delicate surface mount components as you disconnect the cables.

Step 16

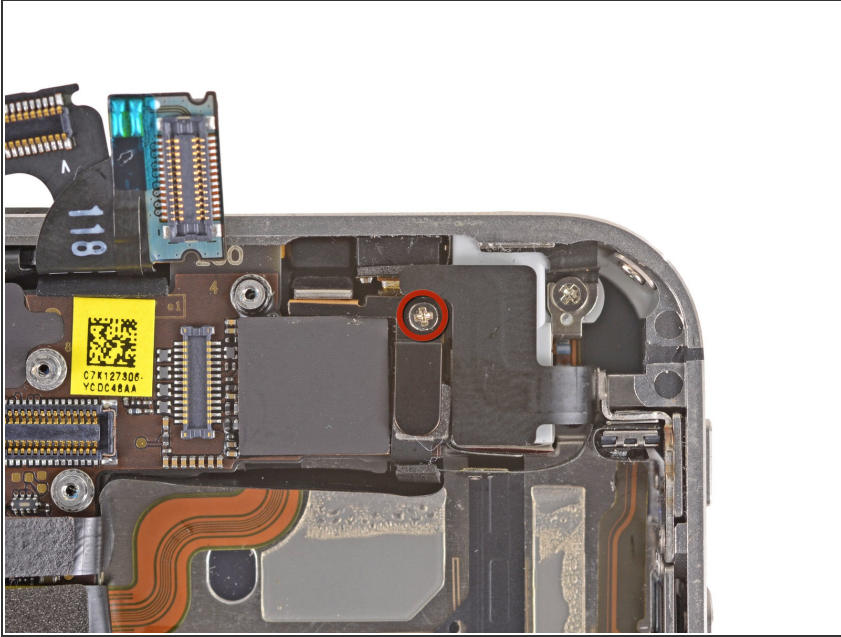


- Remove the 1.5 mm Phillips #000 screw near the headphone jack.

Step 17

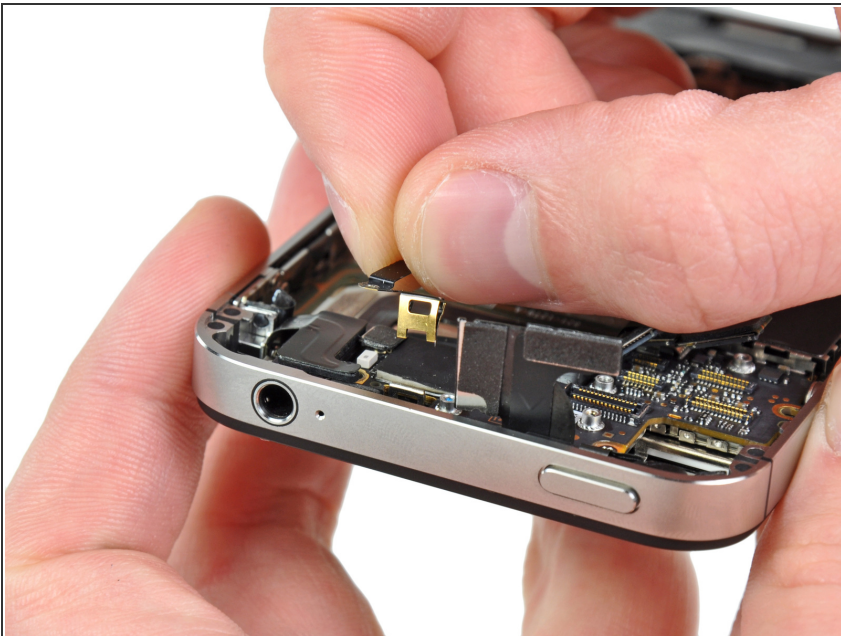


- Lift the small grounding clip up off the logic board and remove it from the iPhone.



Step 18

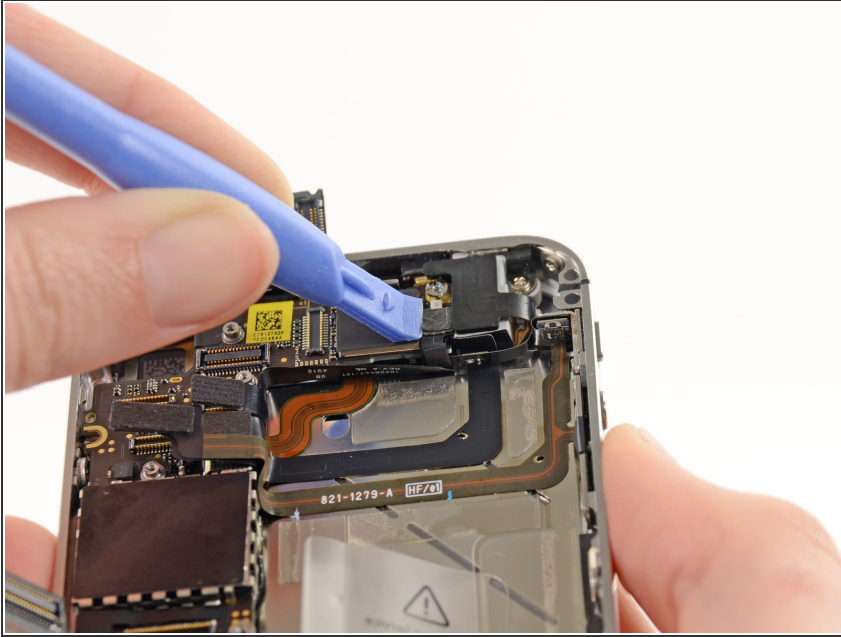

- Use the edge of a plastic opening tool to disconnect the Wi-Fi antenna cable connector from the logic board.


 When reconnecting the wifi ribbon connector to the mother board be VERY certain that the round connector at the end of the ribbon cable is centered on its mating half on the motherboard before applying pressure. Failure to do so will likely destroy both halves of the connection.

Step 19

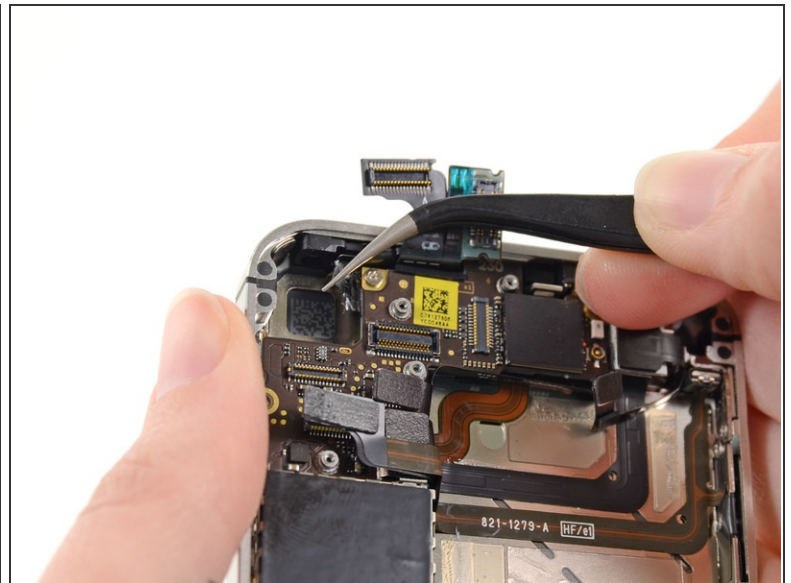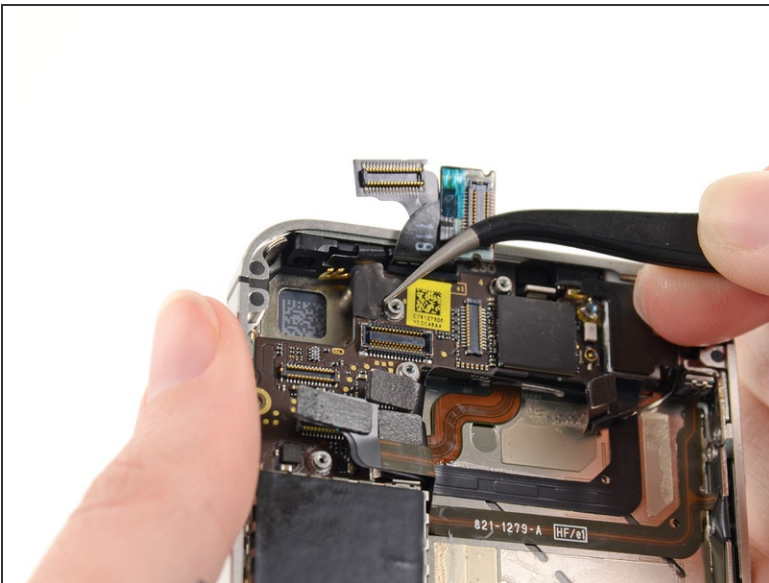


 If present, remove the piece of tape covering a Phillips screw near the power button.

Step 20

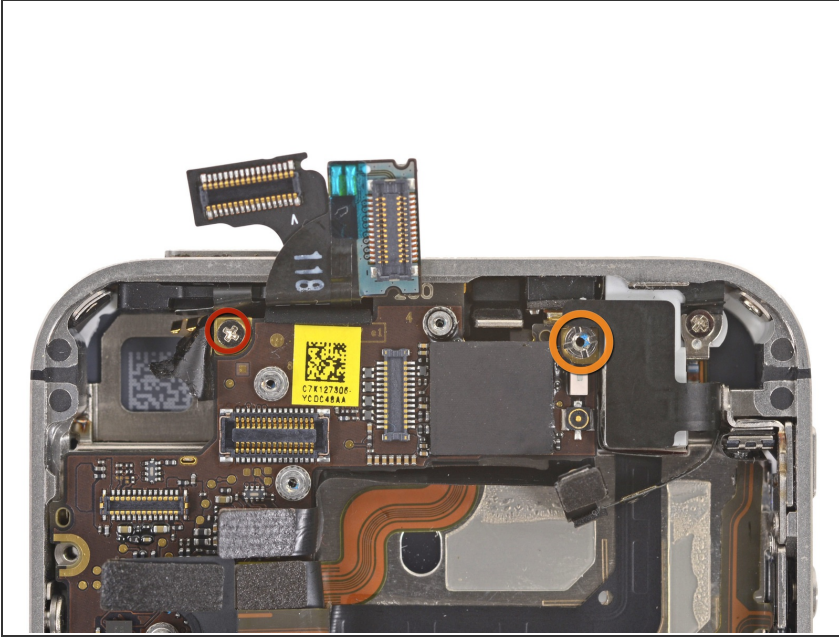

- Remove the 2.5 mm Phillips #000 screw securing the logic board near the power button.
- Use a small flathead screwdriver to remove the 4.8 mm standoff screw near the headphone jack.

Step 21

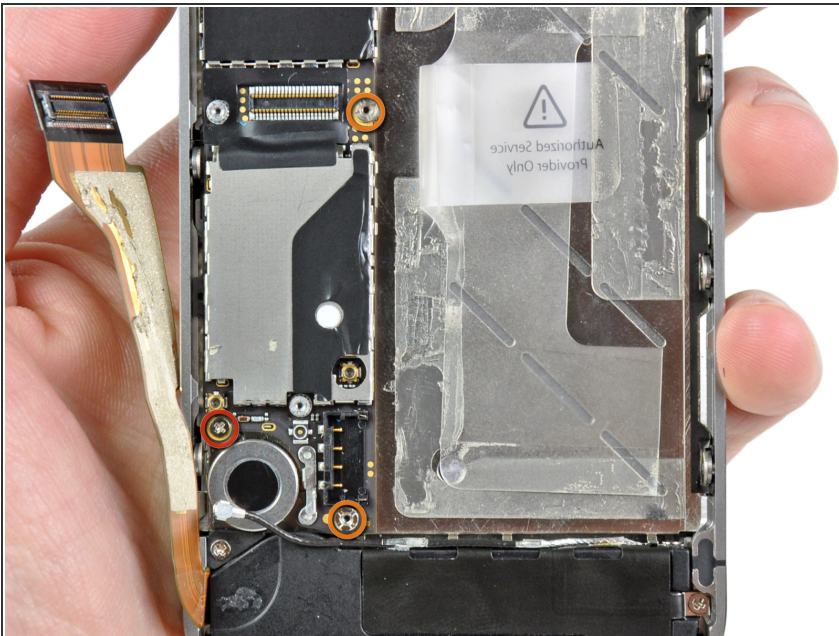

- Remove the 3.4 mm Phillips screw near the vibrator motor.
- Use a small flathead screwdriver to remove the two 3.6 mm standoffs along the side of the logic board nearest the battery opening.

Step 22




- Carefully lift the logic board from the end closest to the speaker enclosure and slide it away from the top edge of the iPhone.
- Remove the logic board.

⚠ Before reassembly, be sure to clean all metal-to-metal contact points on the logic board (**not** the mating halves of connectors) with a degreaser such as windex or isopropyl alcohol. The oils on your fingers have the potential to cause grounding issues.


★ There's a small rectangular rubber pad at the top of the logic board that prevents the display cables from chafing against the edge of the board. If it comes loose during your repair, make sure to [position it correctly](#) when reinstalling your logic board.

Step 23

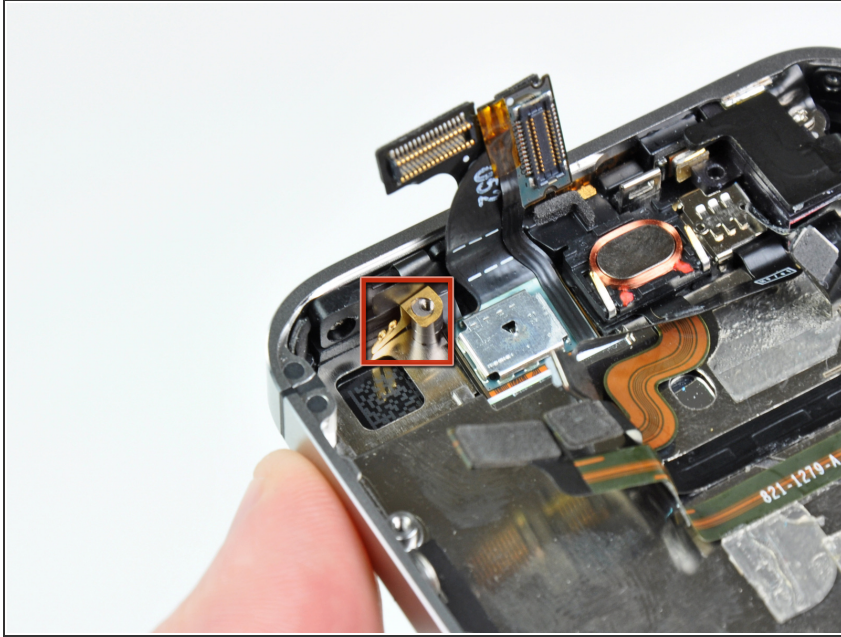

⚠ Be sure not to lose the small grounding finger for the rear facing camera near the power button.

Step 24 — Front Facing Camera

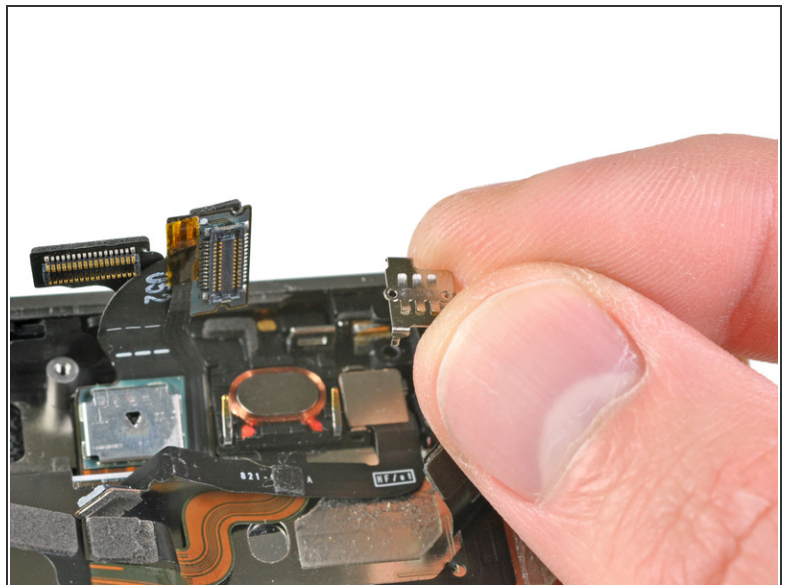

- Use the edge of a plastic opening tool to carefully pry the metal front facing camera retainer away from the case of your iPhone.
- Remove the front facing camera retainer.

Step 25



- Remove the front facing camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-15 09:08:40 PM.